

READ AND FOLLOW ALL SAFETY INSTRUCTIONS! SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

IMPORTANT SAFETY INSTRUCTIONS



WARNING! RISK OF SEVERE INJURY OR DEATH

To reduce the risk of death, injury or property damage from fire, electric shock, cuts, abrasions, falling parts, and other hazards:

- Read all warnings and instructions included with and on the fixture box and all fixture labels.
- Installation and service should be performed by a qualified licensed electrician.
- Maintenance must be performed by a person familiar with the construction and operation of this product and any hazards involved. All applicable codes and ordinances must be followed.
- Read this document before installing, servicing, or maintaining this equipment. These instructions do not cover all installation, service, and maintenance situations. If your situation is not covered, or if you do not understand these instructions or additional information is required, contact Acuity Controls.



WARNING! RISK OF ELECTRIC SHOCK

Before installing, servicing, or maintaining this equipment, follow these general precautions.

To reduce the risk of electrocution:

- Disconnect or turn off power before installation or servicing.
- Make sure the equipment is properly grounded.
- Make all electrical connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.



WARNING! RISK OF FIRE

To reduce the risk of fire:

- Use supply conductors with a minimum operating temperature rating as specified.
- Do not exceed maximum wattage, ratings, or published operating conditions.
- Follow all manufacturer's warnings, recommendations and restrictions to ensure proper operation.



WARNING! RISK OF PERSONAL INJURY

To reduce the risk of personal injury from cuts, abrasions:

- Wear gloves and safety glasses at all times when installing, servicing or performing maintenance.



WARNING! RISK OF PRODUCT DAMAGE

Electrostatic Discharge (ESD) will damage electronic equipment. Do not attempt to open or service electronic equipment without proper ESD precautions.

- Do not touch electronic components. ESD damage can occur.
- Do not change or alter internal wiring or circuitry.

Acuity Controls assumes no responsibility for claims arising out of improper or careless installation or handling of this product. Failure to follow any of these instructions could void product warranty.

For a complete listing of product Terms and Conditions, please visit www.AcuityControls.com

Always read complete installation instructions prior to installation!

SAVE THESE INSTRUCTIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Contains FCC ID: 2ADCB-RMODIT or 2ADCB-RMODIT3
Contains IC: 6715C-RMODIT or 6715C-RMODIT3
IFT #: RCPACRM18-1879 or RCPNLLN20-2057
Acuity Brands Lighting Inc. RMODIT or RMODIT3

Installation Instructions - rPODBA Wireless Switch

rPODBA Basic Overview



The rPODBA is a wireless switch that can be interconnected with the nLight® AIR network of wireless sensors and switches.

Mounting Instructions/Important Notes

INSTALLATION:

Installation of the rPODBA wall switch is simple, straight forward, and quick! Designed as truly "wire-free" with embedded wireless and battery power, installation requires zero wiring. Follow the simple steps below to perform the mechanical installation of the rPODBA Wall Switch.

OUT-OF-THE-BOX DECORA WALL PLATE:

- Remove the wall plate from the device by pulling the sides out to expand the wall plate and release it from the mounting flanges.
- Connect the unit to the gang box
 - o The unit will connect to the gang box by screws, one at the top and one at the bottom
 - o To ensure correct wall plate installation, drive the screws until the mounting flanges contact the wall surface. If the screws are overdriven, the mounting flanges will disengage, preventing wall plate installation. If this happens, reattach the mounting flange(s) and install to correct position. (The flanges may be reattached by inserting the two tabs in the side of the unit and pushing the part inward to engage the three snaps.)
- Reattach the wall plate
 - o Expand the wall plate horizontally
 - o Place the wall plate onto the unit
 - o Contract the horizontally expanded wall plate onto the unit such that the side flange features seat inside the wall plate
- No wiring needed




Retainer Clip



OUT-OF-THE-BOX DECORA WALL PLATE:

When installing the unit with standard off-the-shelf decora wall plates, the following steps should be followed.

- Remove the Acuity wall plate from the device by pulling the sides out to expand the wall plate and releasing it from the mounting flanges.
- Unhook and remove the side flanges from the device
- Connect the unit to the gang box
 - o The unit will connect to the gang box by screws, one at the top and one at the bottom
- Attach the wall plate

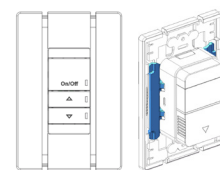

DEVICE PROGRAMMING:

- Add rPODBA to the appropriate nLight Air group and control zone(s) using the Clarity Pro mobile app. Upon successfully saving, the switch will automatically control the lights in the space.

For preset scene capable switches only (i.e. "2S" and "4S" devices):

- After assigning to the nLight Air group, preset scenes buttons will automatically operate under the following default settings:

rPODBA 4S (DX):

- Preset Scene button 1 is set to 100%
- Preset Scene button 2 is set to 66%
- Preset Scene button 3 is set to 33%
- Preset Scene button 4 is set to OFF

rPODBA 2S (DX):

- Preset Scene button 1 is set to 100%
- Preset Scene button 2 is set to 66%

NOTE

Holding the button for greater than 10 seconds will bring the switch into a wake-up mode (identified by all LEDs lit solid), and updated preset scene will not save.

- The preset scene levels can be changed by first adjusting the light level of the nLight Air devices in the group with either the unit's raise/lower buttons (i.e. rPODBA 2S DX, rPODBA 4S DX), via additional on/off/raise/lower rPODBA in the group, or through SensorView if the nLight Air group is networked. All devices in the nLight Air group (i.e. nLight Air enabled fixtures, power packs) can be set to the same or different levels, and ALL devices in the group must be included in the preset scene (i.e. devices must be set to off, or a level between 1 - 100%, and cannot be excluded from the preset scene).
- Once lights are at a desired level, hold the appropriate preset scene button for 5 seconds. Once the button begins flashing rapidly, release to save the new preset scene. All lights will dim down and back up to identify that the preset scene level has saved successfully.

BATTERY REPLACEMENT:

- Remove wall plate.
- Carefully pry the retainer clip away from the module while pulling the rPODBA from the retainer housing.
 - o Using a flat head screwdriver, carefully pry the retainer clip away from the module. Use the tip of the screwdriver to pry against the tab on the module to help remove the rPODBA module from the retainer clip. Otherwise, simply unscrew the retainer and module together from the gang box, then separate the module from the retainer.
- Remove the battery cover with a short slide of the door, then lift battery cover off.
 - o Note the arrow on the battery cover for direction to slide cover, also the ridges on the side for finger grips.
- Remove old batteries and replace with new ones.
- Reinstall battery cover by aligning the battery cover line with the line on the module, then slide shut.
- Reinstall the rPODBA Module into the retainer until secured
- Reinstall wall plate
- Done!



Alignment Line



CAUTION - To Reduce Risk of Fire. Use only Energizer L92 lithium batteries or any size AAA batteries of Type Zinc-Carbon, Alkaline, or Nickel-Cadmium

CAUTION - The cell used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

Dispose of used cell promptly. Keep away from children.